

MONTAGEANLEITUNG ASSEMBLY INSTRUCTION

“Jumbo”

ART.-NR. 500 666



ROLAND WERK GmbH

Industriestraße 16


49681 Garrel

Tel.: 0 44 74 / 94 83-0

Fax: 0 44 74 / 94 83-33

www.roland-werk.de

MONTAGEANLEITUNG ASSEMBLY INSTRUCTION

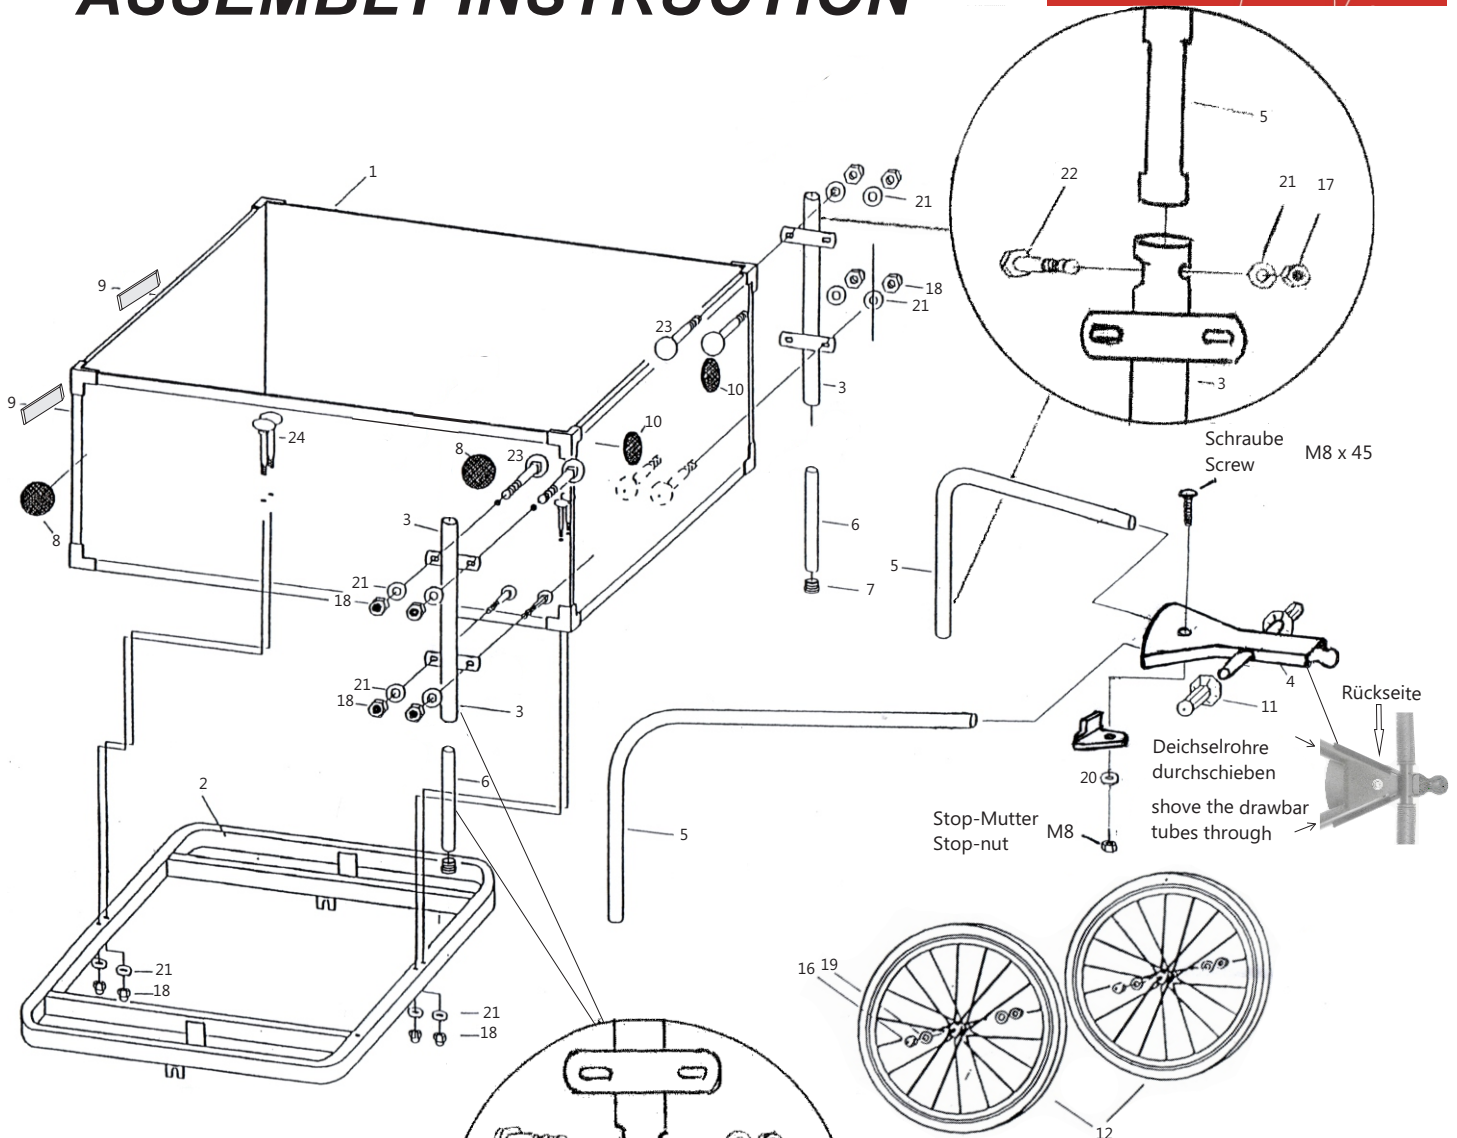

16

4 x

Achsmutter
Axle nut

17

4 x

Stop-Mutter
Stop-nut M6

18

12 x

Mutter
Nut M6

19

4 x

Scheibe
Washer \varnothing 10.5

20

1 x

Scheibe
Washer \varnothing 8.4

21

16 x

Scheibe
Washer \varnothing 6.4

22

4 x

Schraube
Screw M6 x 35

23

8 x

Schraube
Screw M6 x 20

24

4 x

Schraube
Screw M6 x 45

Nr. No.	Beschreibung Description	Stck Pcs
1	Kasten Box	1
2	Rahmen Frame	1
3	Stützrohraufnahme Support tube adapter	2
4	Griff Handle bar	1
5	Deichselrohr Tow arm tube	2
6	Stützrohr Support tube	2
7	Lamellenstopfen Disc stoppers	2
8	Reflektoren gelb Reflectors yellow	4
9	Z-Reflektoren rot Z-Reflectors red	2
10	Reflektoren weiß Reflectors white	2
11	Kunststoffgriffe Plastic handle bars	2
12	Lafräder Wheels	2